

POWER IN 100-240 V

Fixture cable 3x1.5mm<sup>2</sup> (3x15AWG)

- Use a DMX repeater on each 32nd fixture of the daisy chain or in case the total DMX cable length exceeds 1000 ft (300m).
- Install a data terminator on the DMX OUT cable of the last unit
  of the daisy chain as described in the DMX connection kit manual.
- For further details on fixture connection and installation, please refer to the relevant instruction manual.

Description: PARADE S RECESSED CONFIGURATION SCHEME		
Code:	Scale: 1:8	Weight:
Revision: A-02	SHEET 1 OF 1	Note:





